

# ASSEMBLY INSTRUCTIONS

## Little Giant Service Cart




# HARDWARE KIT


Check that your hardware kit includes all of the following pieces:



**A** Bolt on Handle  
QTY: 2

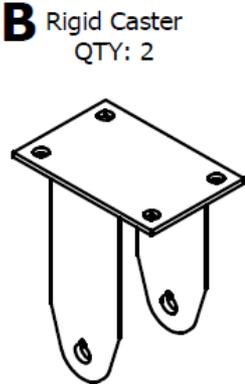


**B** Rigid Caster  
QTY: 2

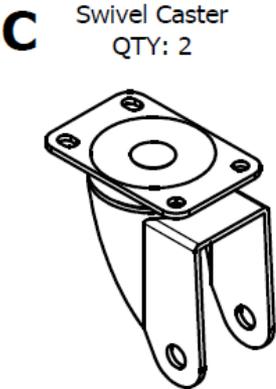


**C** Swivel Caster  
QTY: 2


**D** 5/16-18 x 2" Long Bolt  
QTY: 4

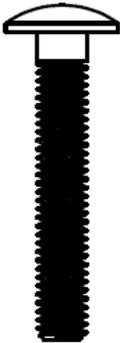

**E** 5/16 Flat Washer  
QTY: 4



**G** 1/4-20 x 3/4" Long Bolt  
QTY: 16



**H** 1/4 Flat Washer  
QTY: 16



**K** 1/4-20 Nylon Locking Nut  
QTY: 16




**F** 5/16-18 Nylon Locking Nut  
QTY: 4



# STEP 1


Bolt Handle **(A)** to Frame Using 4 of each: 5/16-18 x 2" Bolts **(D)**, 5/16 Washers **(E)**, 5/16-18 Nylon Lock Nuts **(F)**.

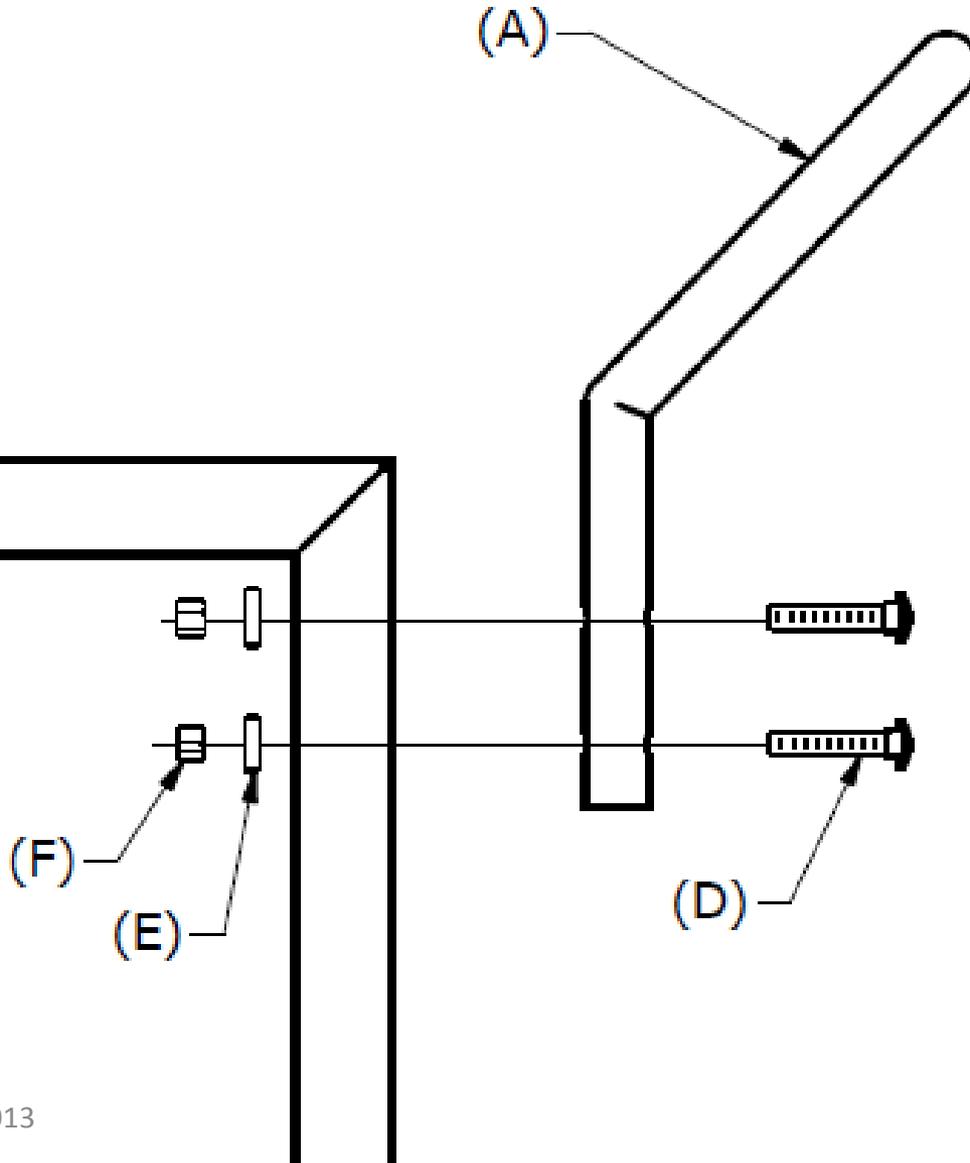

## STEP 2

Lay Service Cart on Side to Continue Assembly. Bolt Rigid Casters **(B)** to Bottom of Cart Using  $\frac{1}{4}$ -20 x  $\frac{3}{4}$ " Bolts **(G)**,  $\frac{1}{4}$  Washers **(H)**, and  $\frac{1}{4}$ -20 Nylon Lock Nuts **(K)**. Repeat for Both Rigid Casters.


**Note:** Rigid Casters are to be Installed Opposite the Handle Side.

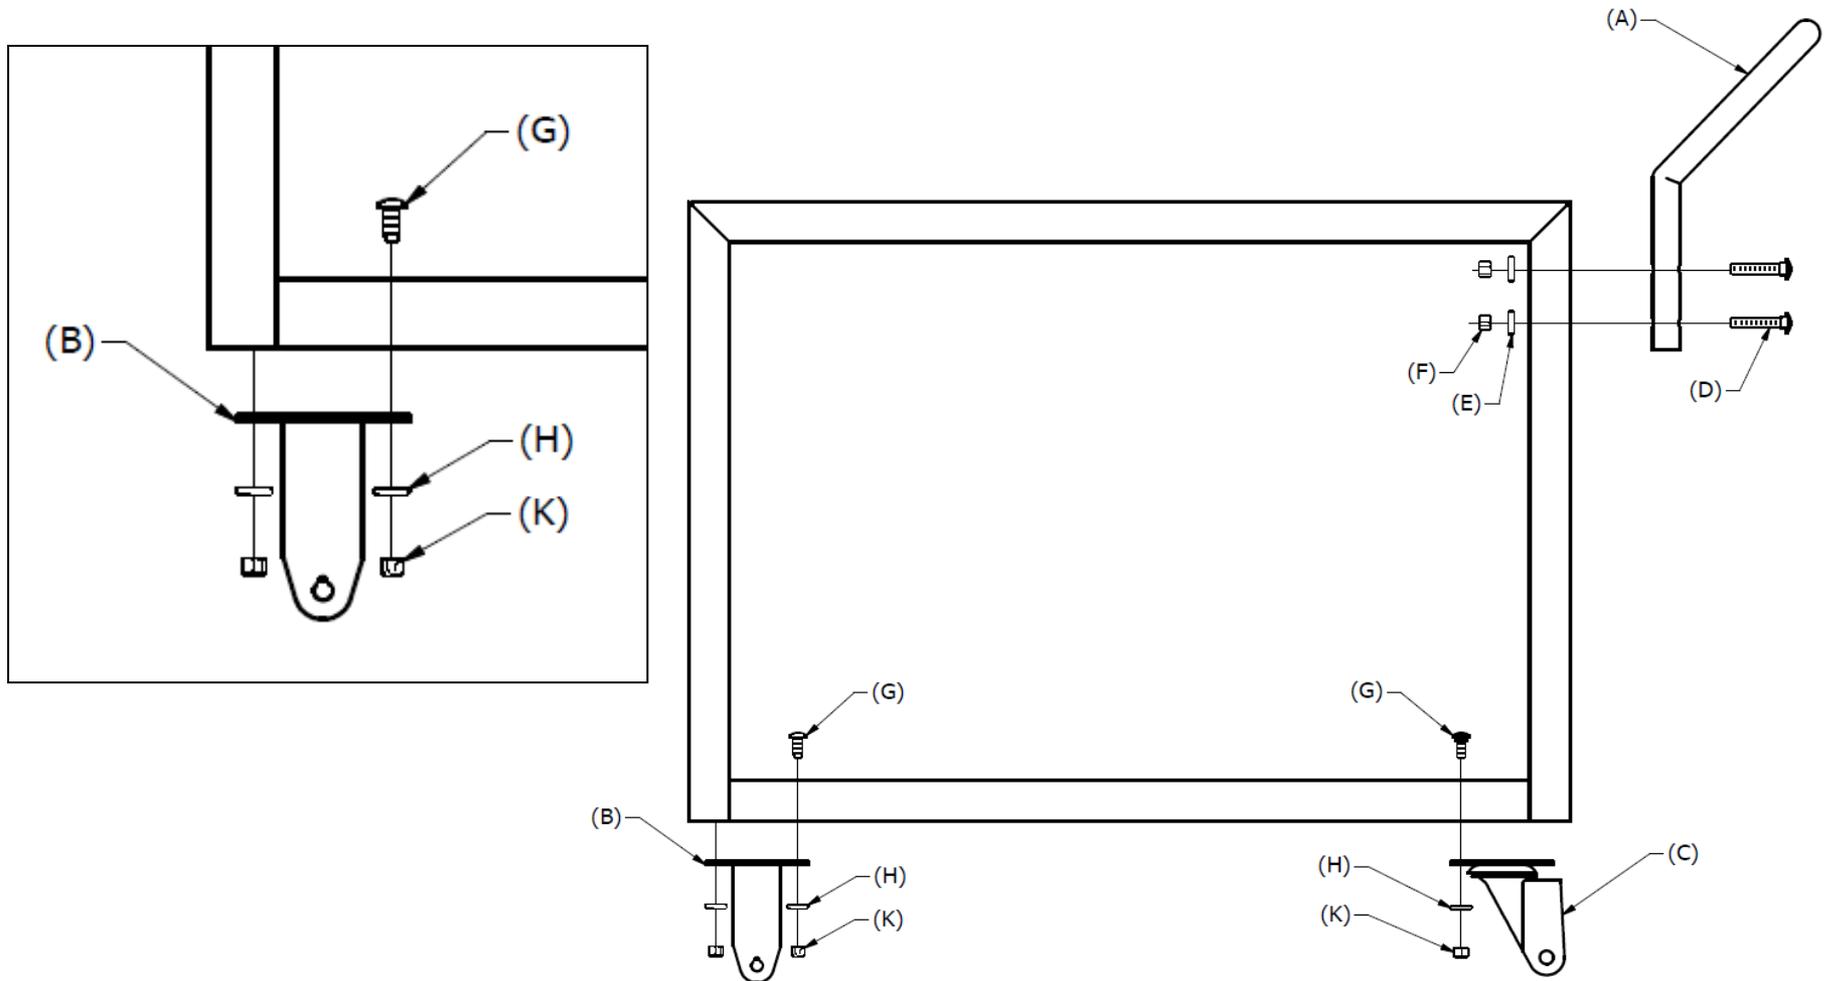


# STEP 3

With Service Cart Still on Side, Continue Assembly. Bolt Swivel Casters (C) to Bottom of Cart Using ¼-20 x ¾" Bolts (G), ¼ Washers (H), and ¼-20 Nylon Lock Nuts (K). Repeat for Both Swivel Casters.




**Note:** Swivel Casters are to be Installed on the Handle Side.

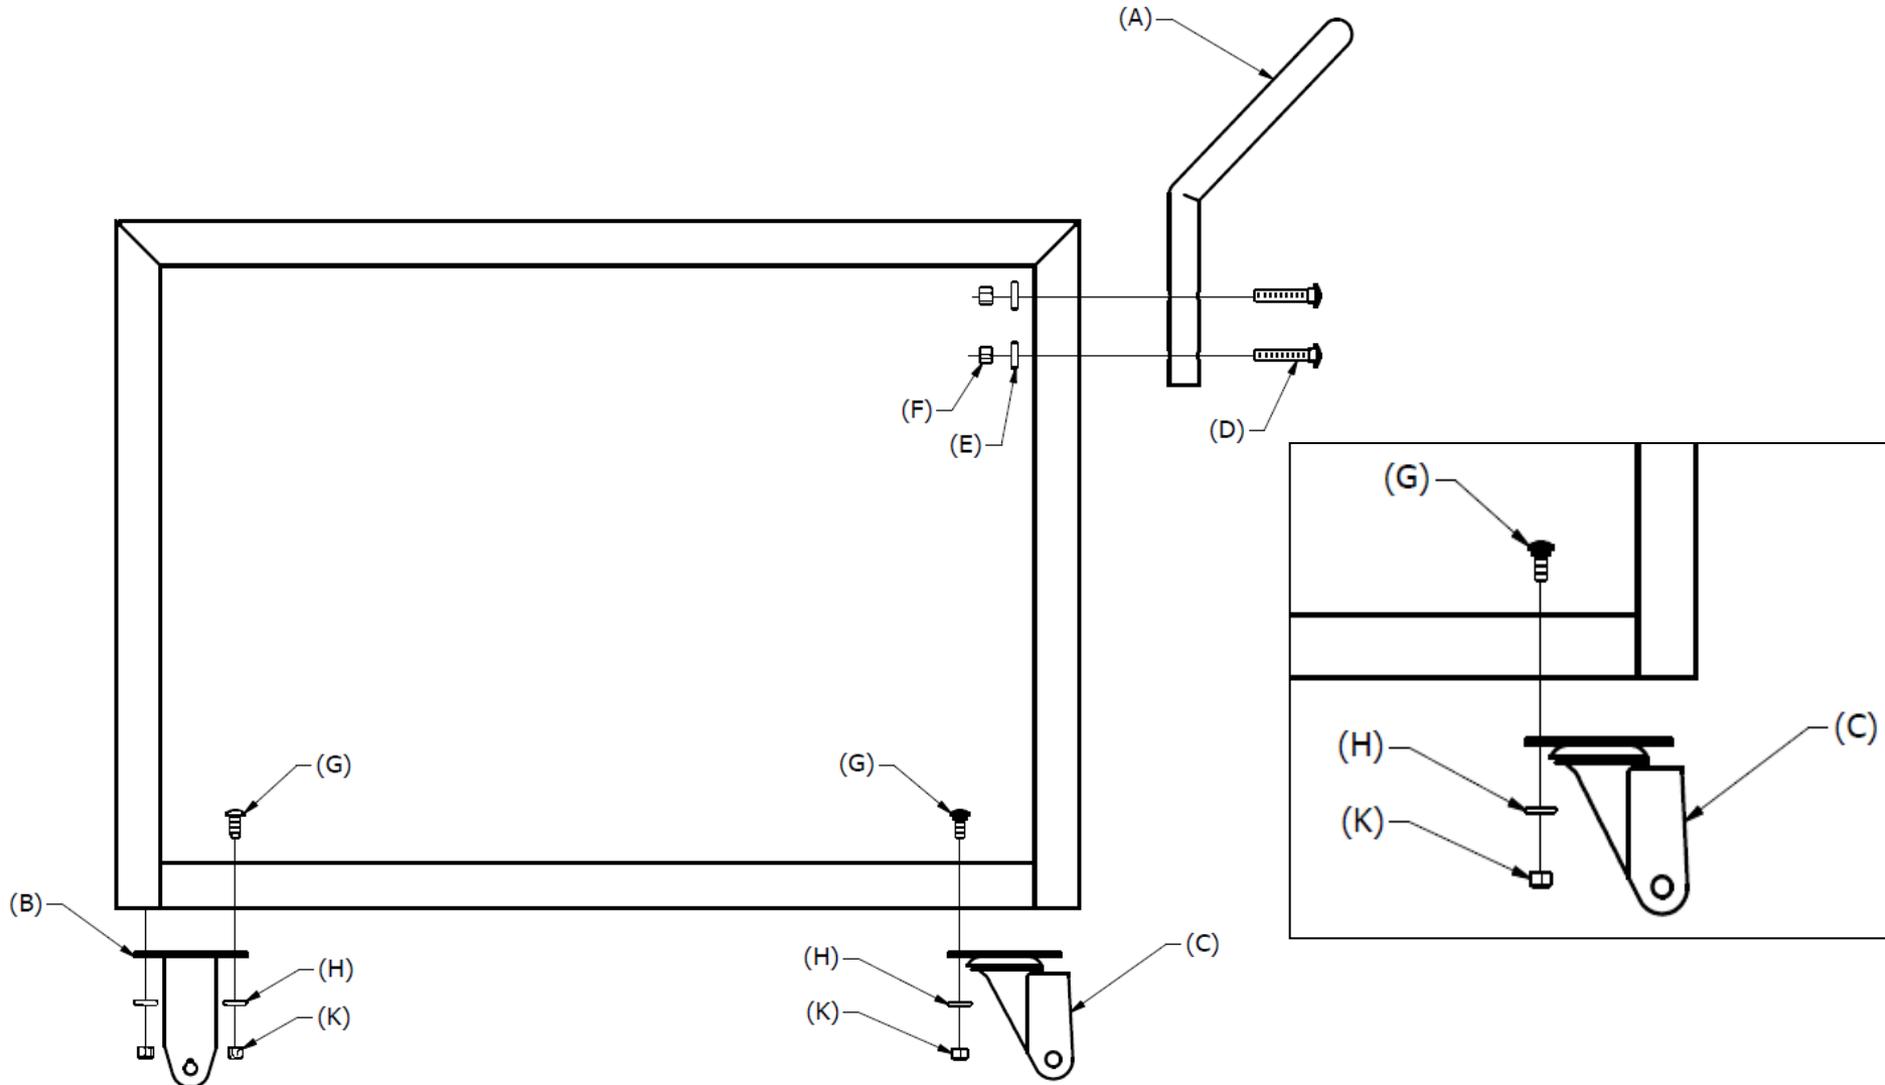

# Assembly Detail Views

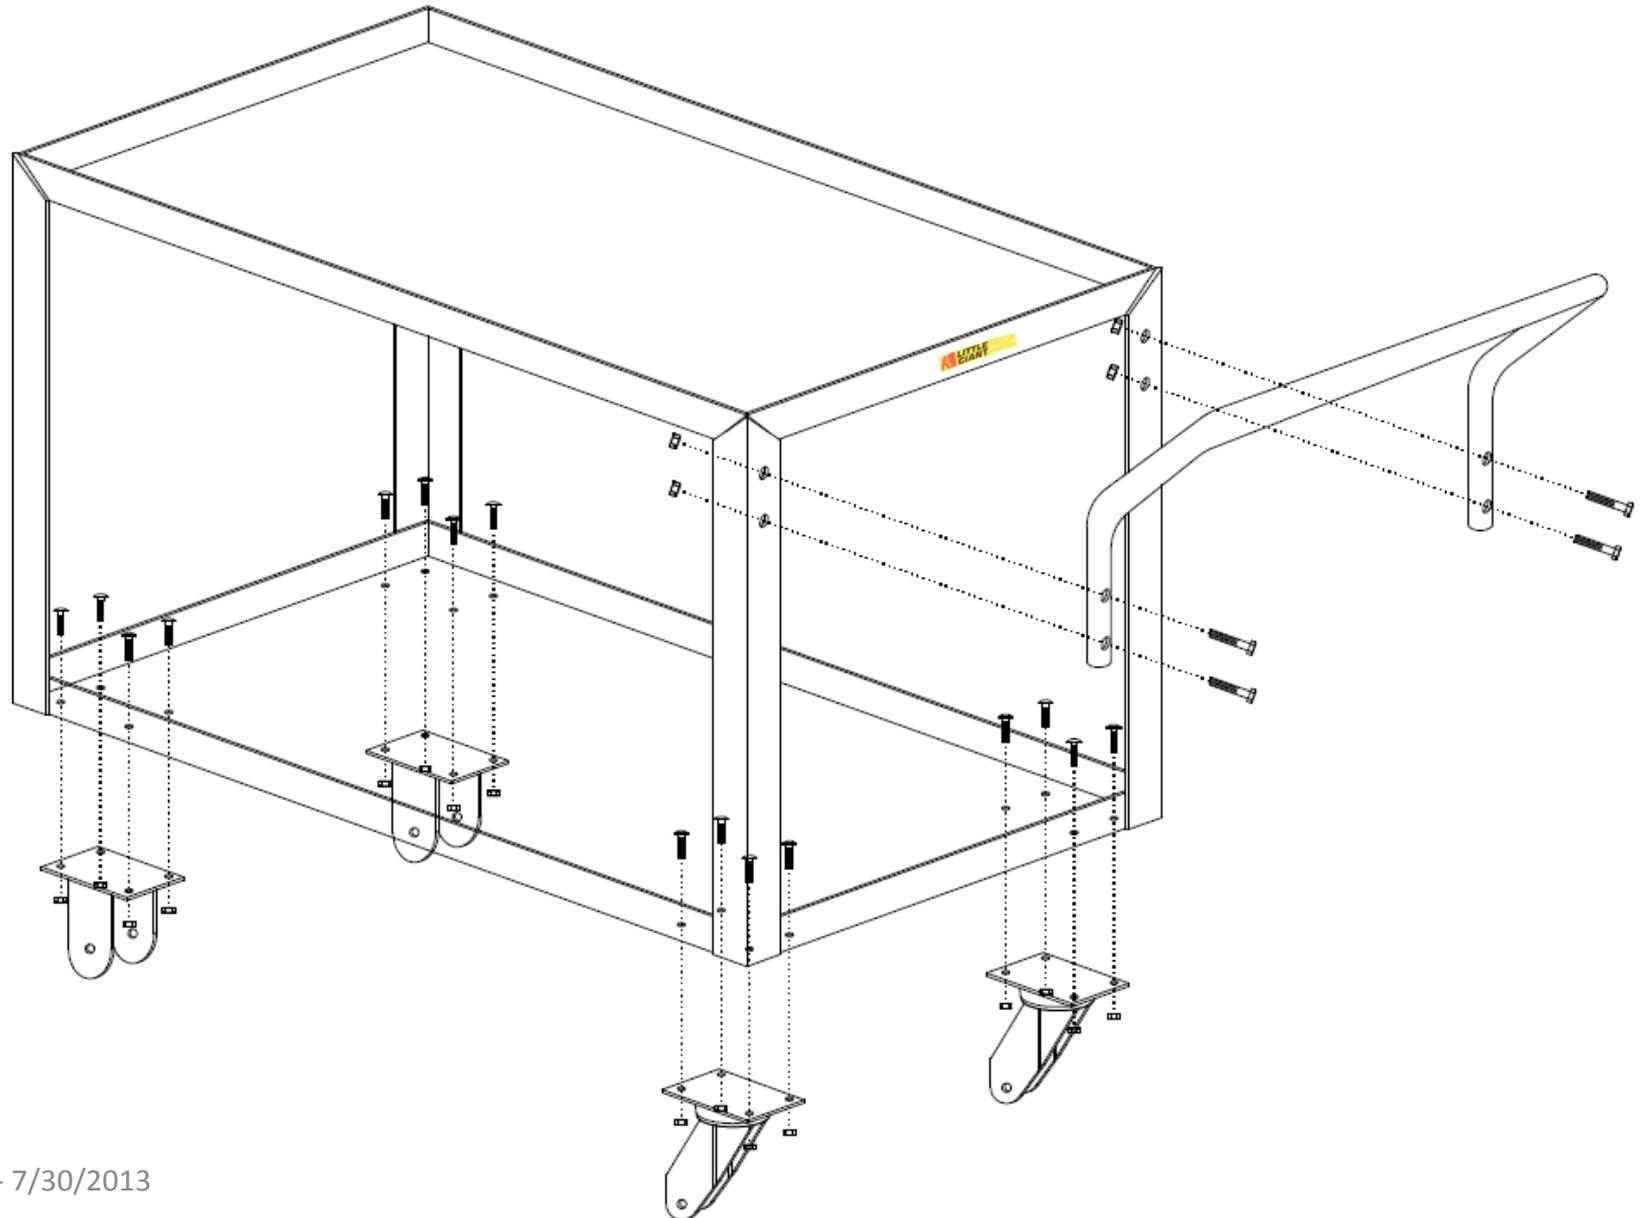

# Assembly Detail Views

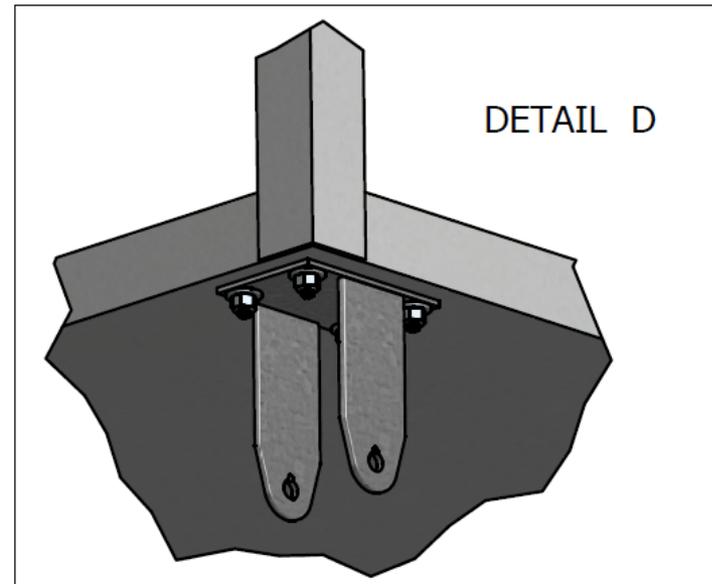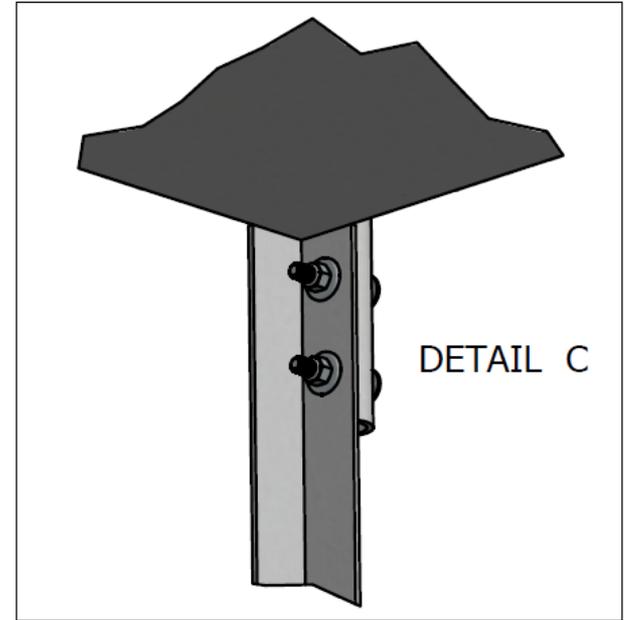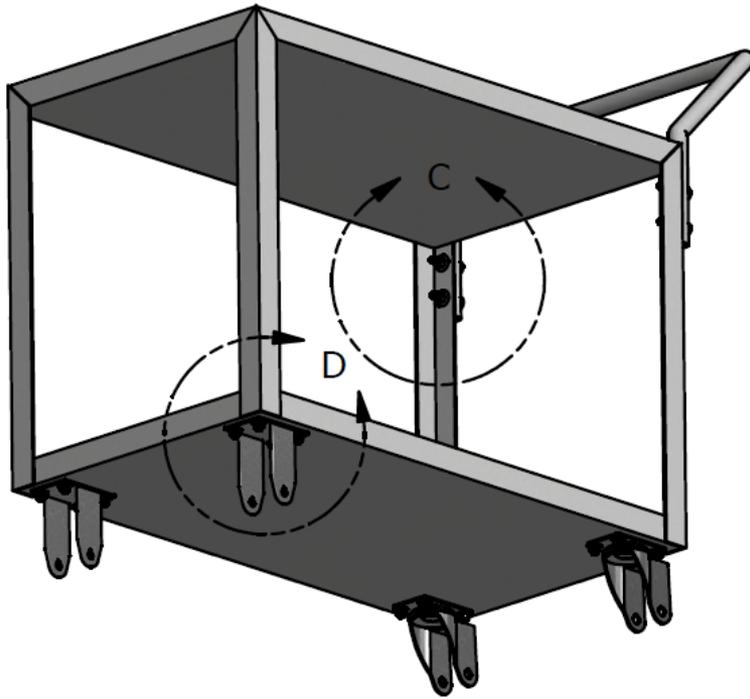

# Final Assembled Unit

